
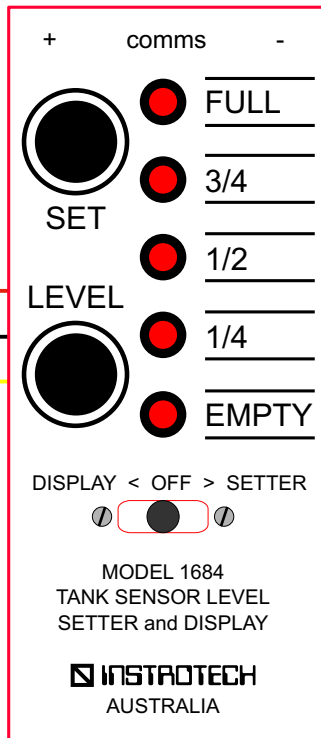


# TANK SENSOR LEVEL SETTER and DISPLAY

## Model 1684\_set for Fire Truck Sensors

FOR USE WITH ALL TANK SENSORS - WATER, CLASS A AND CLASS B FOAM

### WIRING DIAGRAM :

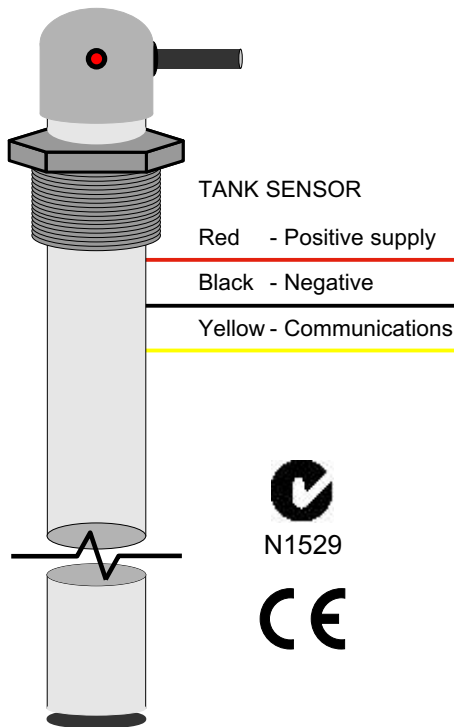

NOTE: HOLD THE SENSOR BY ITS TOP CAP WHEN SETTING THE LEVELS

### OPERATING INSTRUCTIONS:

Connect the 3 tank sensor wires to this unit: + (red), communications (yellow), - (black).

### TO SET LEVELS:

Switch to SETTER. After a self-test, the EMPTY LED flashes. The flashing LED shows the current level the sensor will memorise when the SET button is pressed. Immerse the sensor to the liquid level required to switch the EMPTY LED, or fill the tank to that level. Press SET. Repeat for the other levels. To bypass any level, press LEVEL. Any level may be set without affecting the others. If SET is pressed with no sensor connected, all LED's will flash. To reset any error, press LEVEL for about 1 second.

### TO DISPLAY LEVELS:

Switch to DISPLAY. After reading the memory of the tank sensor, the relevant LED's light to indicate the current level of liquid. If no sensor is connected, all LED's will flash.

Switch this unit to OFF. Use 9V battery.

**SUPPORT 1800 999 063**

**Instrotech Australia Pty Ltd**  
P O Box 509  
Torrens Park SA 5062  
email: [info@instrotech.com.au](mailto:info@instrotech.com.au)  
[www.instrotech.com.au](http://www.instrotech.com.au)  
**Tel: (08) 8373 5677**  
**Fax +61 8 8373 5667**